


Model L-1C

Quick Setup Instructions

WARNING: Electrical and plumbing connections need to be made by a licensed service person and comply with all Federal, State and Local Health, Electrical, Plumbing and Safety codes.



4 LEVELING LEGS

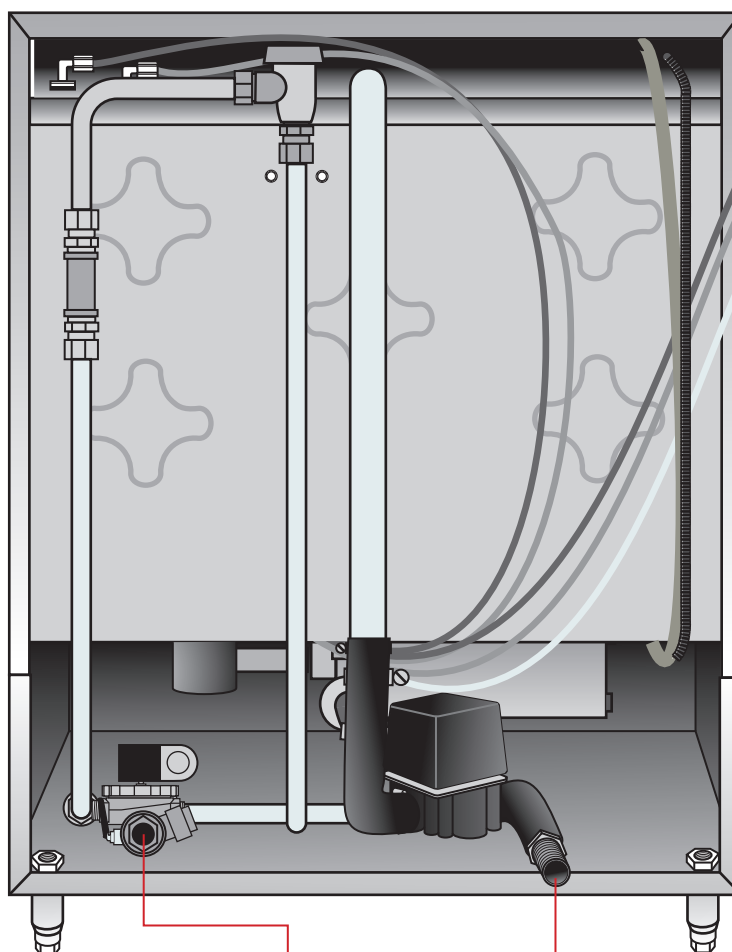

1 1/2" WATER INLET


2 1" DRAIN HOSE CONNECTION

3 TUBE STIFFENER

RED BLUE WHITE


3 CHEMICAL TUBING

STEP 1

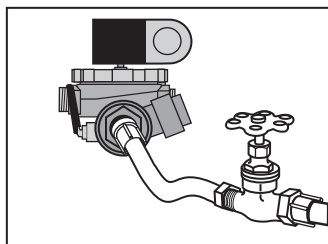


Connect dishmachine to hot water source minimum 120°F required, 140°F temperature recommended.

STEP 2

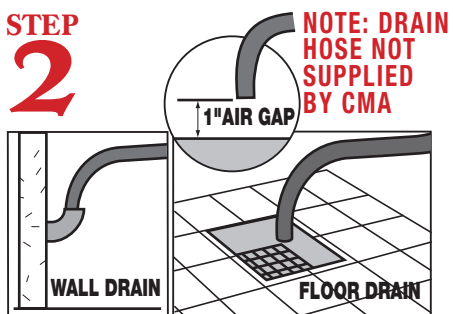


Connect the drain hose to wall or floor drain. The floor drain must have a 1-inch air gap between drain hose and floor drain.

STEP 3

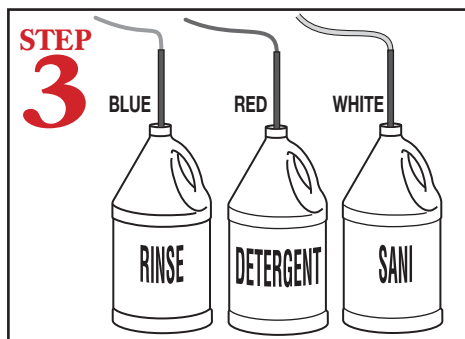

Insert tube stiffener with chemical tubing into each corresponding chemical dispenser.

STEP 4

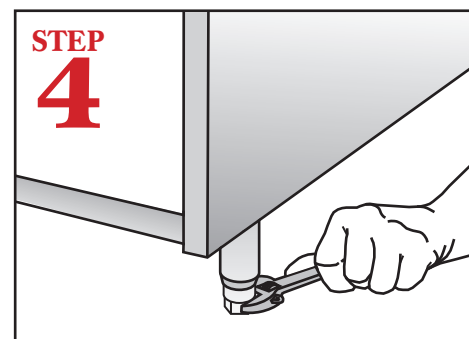

Level dishmachine by adjusting leveling legs. Dishmachine must be level, front and back, to ensure proper performance.


Model L-1C Quick Setup Instructions




WARNING: Electrical and plumbing connections need to be made by a licensed service person and comply with all Federal, State and Local Health, Electrical, Plumbing and Safety codes.

NOTE: WATER AND CHEMICALS TO THIS DISHWASHER MUST BEPROGRAMMED BY A QUALIFIED CHEMICAL SPECIALIST.

- 5 POWER
- CYCLE LIGHT
- 6 DETERGENT
- 6 SANITIZER
- 6 RINSE
- 8 START
- 7 DRAIN / FILL
- THERMOMETER

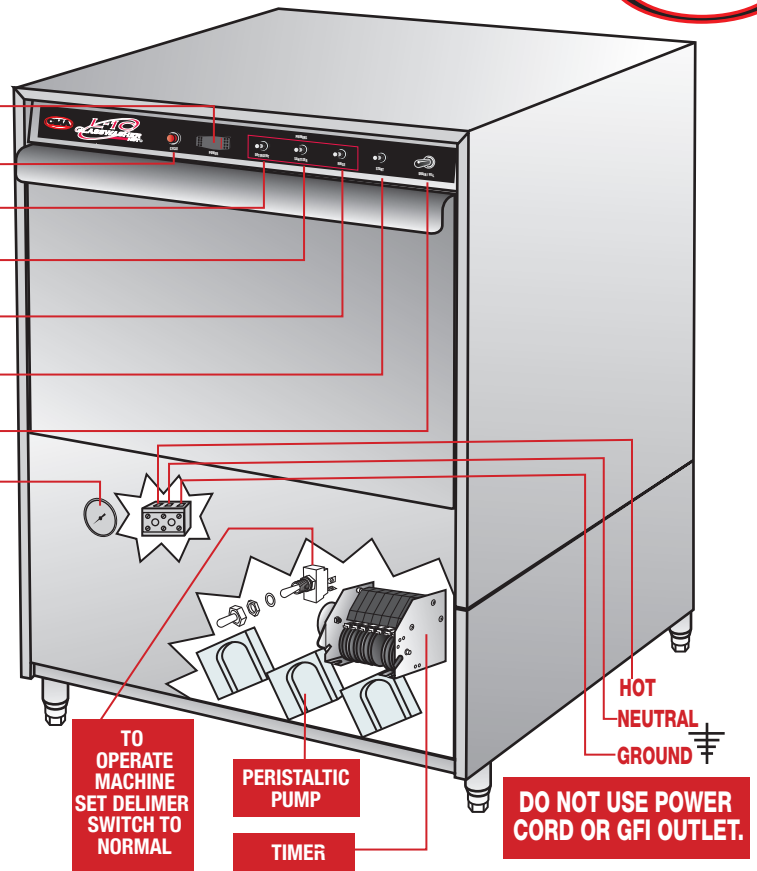


STEP 5

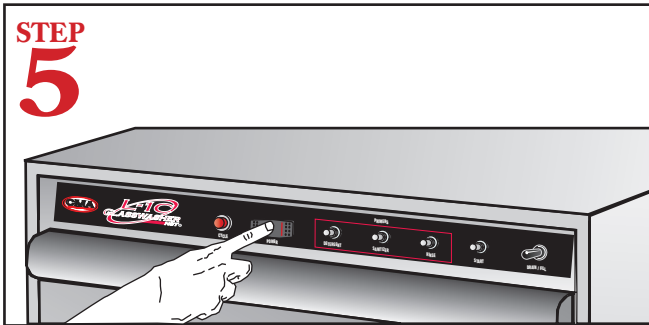


Push power switch to "ON" power.

STEP 6

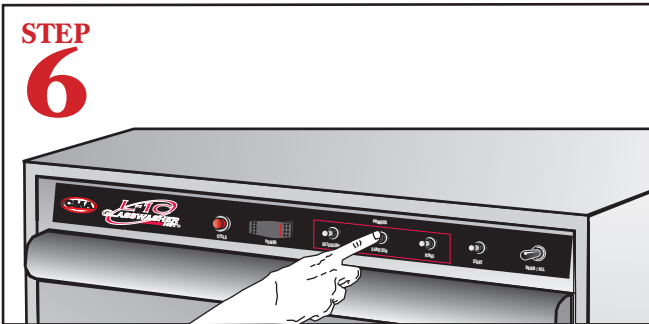


Press and Hold down "SANI", "DETERGENT" and "RINSE" switches to prime chemicals. This step must be repeated each time chemical containers are changed.

STEP 8

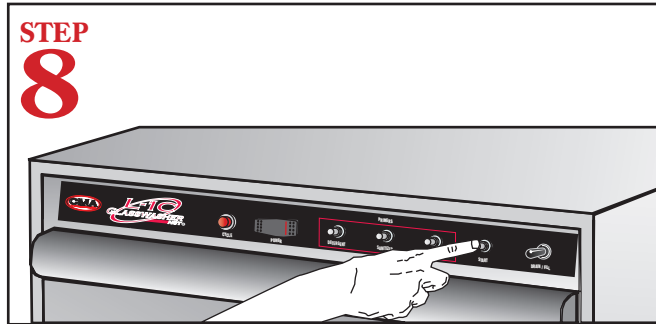


Close the door, then press start switch.

STEP 7

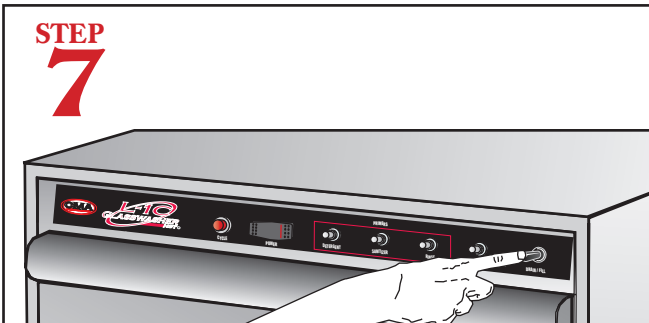

Hold down "FILL" Switch for approximately 10 - 15 seconds to allow water to flow into the dishwasher. Water should reach "FILL LINE" which is located inside at the back of the wash tank. **NOTE:** The 4th cam of timer assembly has to be adjusted to maintain the same water level during the cycle.

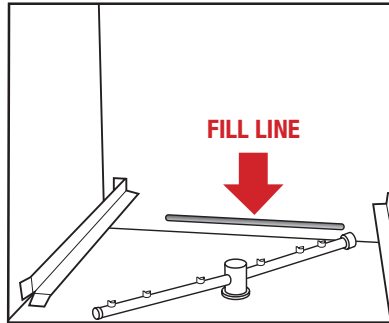

an Ali Group Company



11-2016